



Tools that may be required for installation:
(not furnished)

1. Pliers.
2. Wire ties (for securement).

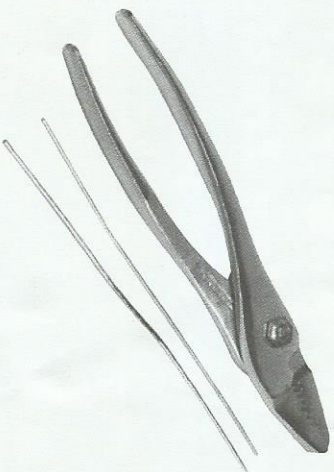


Part illustrations:

- A. Fold back hook (outside fastener).
- B. Fingertip hook (inside fastener).



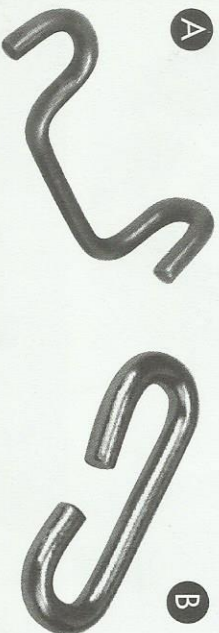


Note:

There is no designated Left or Right chain. Either chain may be used for either tire.

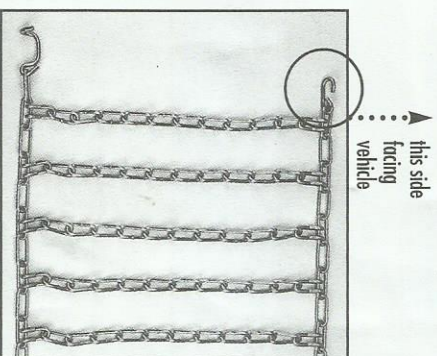


1 Lay chain straight with the open sides of the **cross chain hooks** facing up. The open sides of the **cross chain hooks** must be facing away from the tire when the chain is installed. Make sure all twists are out of the chain assembly.

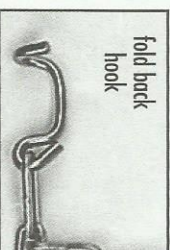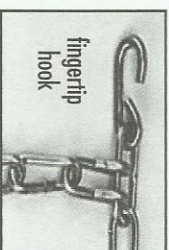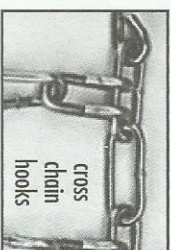

Position the side chain with the **fingertip hook** to go on the inside of the tire (toward body of the machine/vehicle). As a result, the side chain with the **outside fastener** will then be positioned to go on the **outside** of the tire.

2 Grasping the middle of the inside fastener side chain, lift and drape the chain assembly over the tire, making sure the open ends of the cross chain hooks are facing away from the tire. Tuck the loose chain ends under the tire, then move the machine/vehicle forward slightly to be able to work with the fasteners.

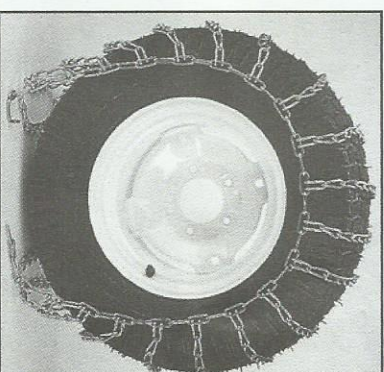

3 Fasten the fingertip hook (inside fastener) by hooking it to the second or third link of side chain.

